

FITTING INSTRUCTIONS

X-SERIES -DOOR VENT



1 TOOLS REQUIRED

- Masking tape
- Drill & drill-bits
- Phillips head screwdriver
- Oscillating cutting tool
- Sandpaper

2 VENT CUTOUT

- Mark the area to be removed on the camper door (Fig. 3).
- Drill a 6mm hole on the inside of each corner to create a radius.
- Use an oscillating cutting tool (or similar) to cut the straight edges.
- Remove material and clean-up edges with sandpaper.

3 INSTALL THE VENT

- Mark the vent mounting holes on the exterior side of the door (Fig. 3).
- Drill 3mm holes through the outer fibreglass shell.
- Fit the vent with grills facing down using screws provided.

4 INSTALL THE CANVAS FLAP

- Attach the adhesive velcro around the cutout on the interior side of the door to match the canvas dust cover velcro (Fig. 2).
- Stick a warning sticker above the velcro.
- Congratulations, your installation is complete!

- **NOTE - attach the canvas dust cover only when in transit, the vent must be open at all other times.**

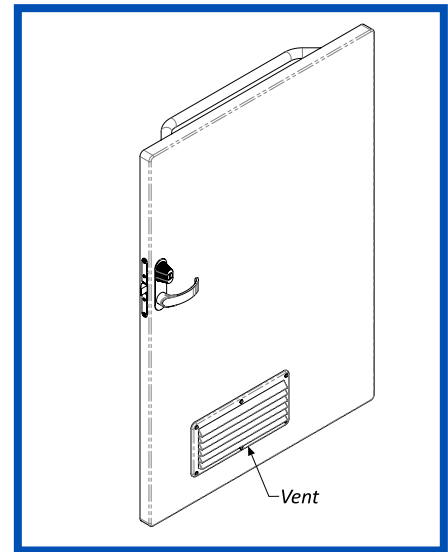


Fig. 1

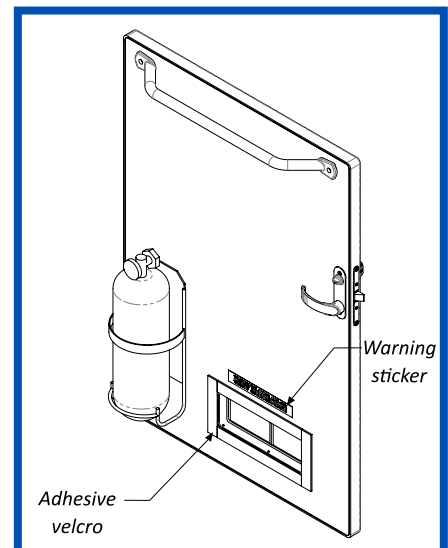


Fig. 2

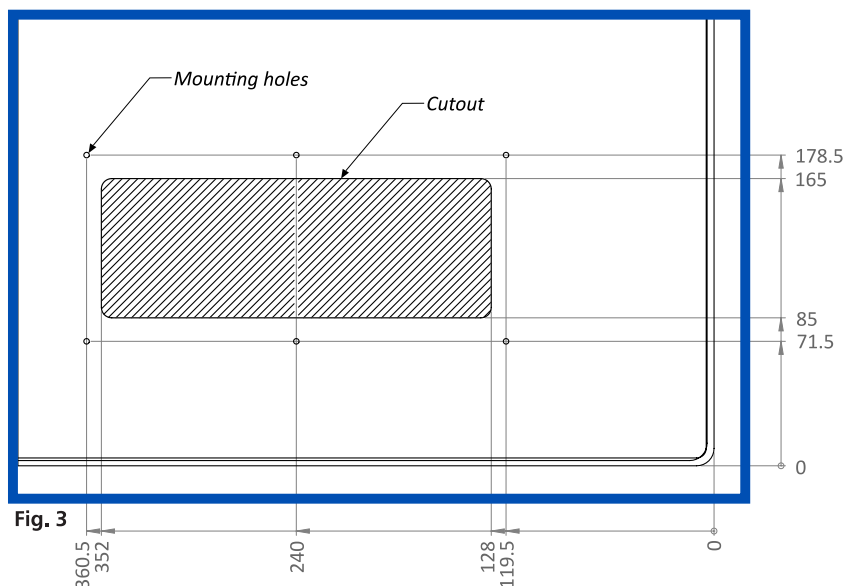


Fig. 3